


TOPAZ

MONTAGE DES JOINTS TOPAZ® OU TOPAZ® Vi TOPAZ® OR TOPAZ® VI ASSEMBLY RULES

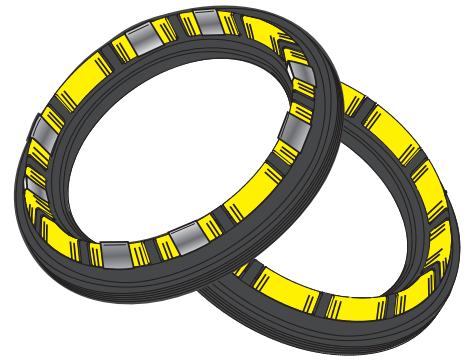

1
NETTOYER
CLEAN UP

2
LUBRIFIER
LUBRICATE

3

4
METTRE EN PLACE
PLACE THE GASKET


5
POSITIONNER
INSERT THE GASKET

6
PLAQUER
PLATE THE GASKET

7
LUBRIFIER
LUBRICATE

8
LUBRIFIER
LUBRICATE


TOPAZ

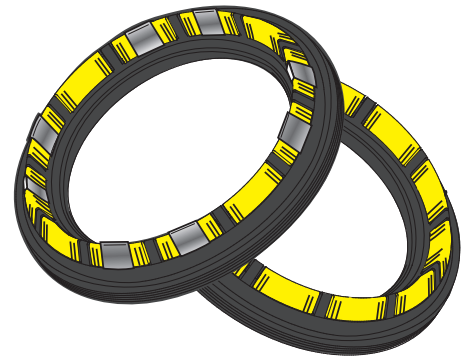

MONTAGE DES JOINTS TOPAZ® OU TOPAZ® Vi TOPAZ® OR TOPAZ® VI ASSEMBLY RULES


9

VÉRIFIER LE CHANFREIN
CHECK THE CONDITION OF
THE CHAMFER

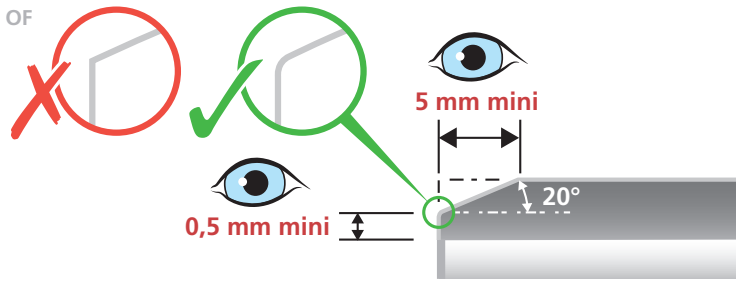


11

CONTRÔLER LA PROFONDEUR
CHECK THE DEPTH

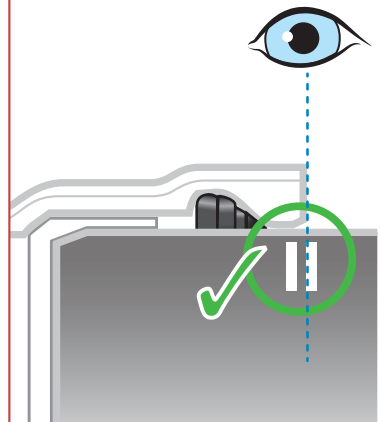



10

EMBOÏTER
INSERT THE SPIGOT
INTO THE SOCKET

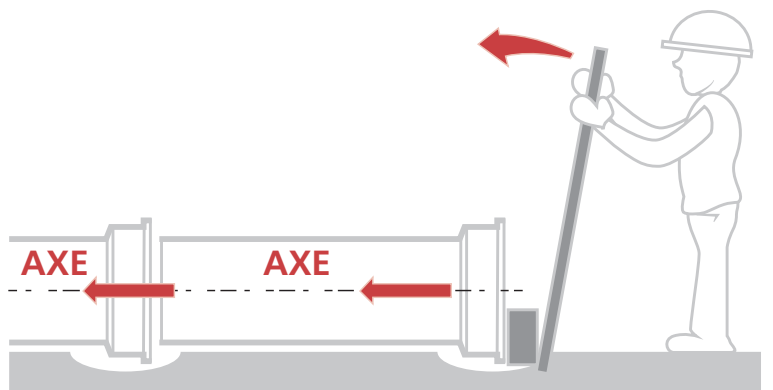

12

CONTRÔLER LE JOINT
CHECK THE RIGHT
POSITION OF THE
GASKET

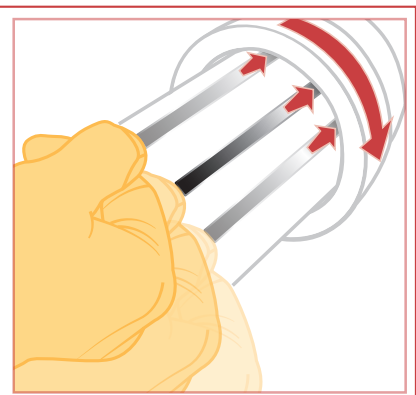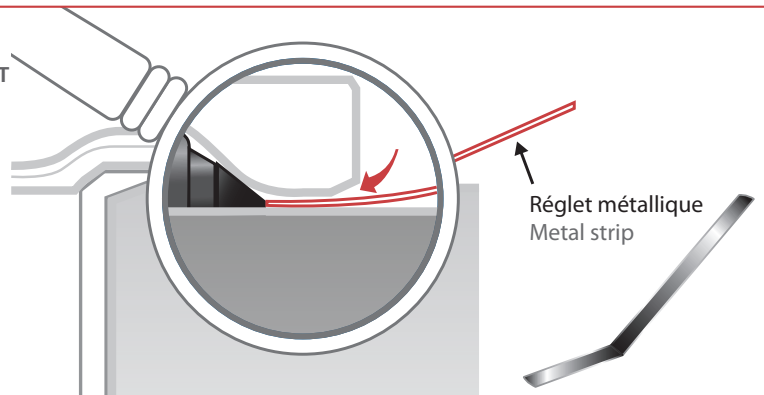

13

DÉVIER SI NÉCESSAIRE
DEFLECT AFTERWARDS
IF NECESSARY

